

Quattro-II 2x120 V Inverter/Charger 3000 VA

12/3000/120 and 24/3000/70



Quattro-II 300 VA

120/240 V input and output, or 120 V input and output (always 120 V output when in inverter mode)

The two AC inputs can be supplied from a split-phase 120/240 V source or a single-phase 120 V source.

When one of the AC sources is available, the Quattro will feed through the AC to its output. The output will therefore mirror

The inverter/charger connects to the neutral and the preferred input line (L1). The power needed to charge the batteries will therefore be drawn from L1.

The Quattro switches to inverter operation when no AC source is available. The inverter output is 120 V single-phase. In invert mode, the Quattro connects both output lines (L1 and L2) together to provide 120 VAC to loads on either line. Any 240 V loads will therefore be supplied only when the Quattro is supplied by a split-phase AC source. This prevents heavy loads such as water heaters or 240 V air conditioners from discharging the battery.

PowerControl and PowerAssist - Boosting the capacity of the grid or a generator

A maximum grid or generator current can be set. The Quattro will then take account of other AC loads and use whatever is extra for battery charging, thus preventing the generator or grid from being overloaded (PowerControl function). PowerAssist takes the principle of PowerControl to a further dimension. Where peak power is so often required only for a limited period, the Quattro will compensate for insufficient generator, shore or grid power with power from the battery. When the load reduces, the spare power is used to recharge the battery (available on L1 input only).

Two AC inputs and two AC outputs

The Quattro can be connected to two independent AC sources, for example, shore-side power and a generator, or two generators. The Quattro-II will automatically connect to the active source.

The main output has a no-break functionality. The Quattro takes over the supply to the connected 120 V loads in the event of a grid failure or when shore/generator power is disconnected. The transfer time of the L1 output is less than 18 milliseconds so that computers and other electronic equipment will continue to operate without disruption. The transfer time of the L2 output is longer: approximately 40 milliseconds.

The second (auxiliary) output is live only when AC is available on the input of the Quattro. Loads that should not discharge the battery can be connected to this output.

Virtually unlimited power thanks to parallel and three-phase operation

Up to 6 Quattros can operate in parallel to achieve higher power output.

In addition to parallel connection, three units of the same model can be configured for three-phase output. In multi-phase setups, L2 is disabled on all units.

On-site system configuring, monitoring and control


Settings can be changed in a matter of minutes with the VictronConnect app or VEConfigure software (computer or laptop and MK3-USB interface needed).

Several monitoring and control options are available: Cerbo GX, Ekrano GX, laptop, computer, Bluetooth (with the optional VE.Bus Smart dongle), Battery Monitor, and Digital Multi Control Panel.

Remote configuring and monitoring


Install a Cerbo GX or other GX product to connect to the internet.


Operational data can be stored and displayed on our VRM (Victron Remote Management) website free of charge.






Connection Area

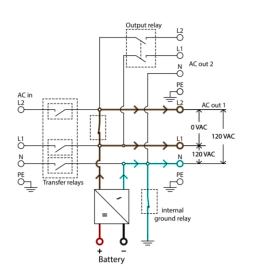

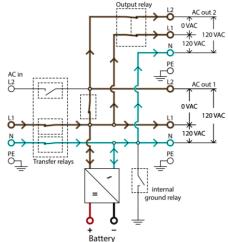

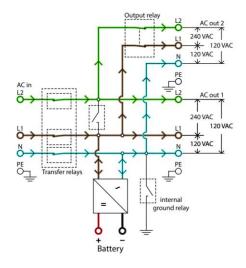

Power flow: inverter mode

Power flow, 120VAC-input

Power flow, split phase input





Ekrano GX or Cerbo GX

Provides intuitive system control and monitoring and enables access to our free remote monitoring website: the VRM Online Portal.



VRM Portal

Our free remote monitoring website (VRM) will display all system data in a comprehensive graphical format. System settings can be changed remotely via the portal. Alarms can be received by e-mail or push notification.

VRM app

Monitor and manage your Victron Energy system from your smart phone and tablet. Available for both iOS and Android.



Quattro-II 2x120V	12/3000/120-50 2x120V	24/3000/70-50 2x120V
PowerControl & PowerAssist	Yes (on L1 input)	
Transfer switch	50 A	
Maximum AC input current	50 A (each leg)	
	INVERTER	
DC Input voltage range	9.5 – 17 V	19-33 V
Output when in inverter mode	Output voltage: 120 Vac ± 2%	
Cont. output power at 25 °C (3)	Frequency: 60 Hz ± 0.1 % (1) 3000 VA	
Cont. output power at 25 °C (3)	2400 W	
Cont. output power at 40 °C	2200 W	
Cont. output power at 65 °C	1700 W	
Maximum apparent feed-in power	2500 VA	
Peak power	5500 W	
Maximum efficiency	93 %	94 %
Zero load power	15W	11W
Zero load power in AES mode	10W	8W
Zero load power in Search mode	4W	4W
	CHARGER	
AC Input	Split-phase: 180-280 Vac 45 – 65Hz Single-phase: 90-140 Vac 45 – 65Hz	
Charge voltage 'absorption' Charge voltage 'float'	14.4 V 13.8 V	28.8 V 27.6 V
Charge voltage float Storage mode	13.8 V	27.6 V 26.4 V
Maximum battery charge current (4)	13.2 V 120 A	20.4 V 70 A
Battery temperature sensor	Ye	,
battery temperature sensor	GENERAL	
Auxiliary output (5)	50 A (each leg)	
External AC current sensor (optional)	100 A	
Programmable relay (6)	Yes	
Protection (2)	a – g	
VE.Bus communication port	For parallel and three-phase operation, remote monitoring and system integration	
General purpose com. port (7)	Yes, 2x	
Remote on-off	Yes	
Operating temperature range	-40 to +65 °C (-40 -150 °F) Fan assisted cooling	
Humidity (non-condensing)	max 95 %	
	ENCLOSURE	
Material & Colour	Steel, blue RAL 5012	
Protection category	IP:	
Battery-connection	2x2 M8 bolts	2 M8 bolts
120/240 VAC-connection	Screw terminals	
Weight	32.8 kg (52 lb)	22.5 kg (50lb)
Dimensions (hxwxd)	579 x 319 x 168 mm (23 x 13 x 7 inch)	
	STANDARDS	
Safety	EN-IEC 60335-1, EN-IEC 60335-2-29	
	EN 55014-1, EN 55014-2	
Emission, Immunity	EN-IEC 61000-3-2, EN-IEC 61000-3-3 IEC 61000-6-1, IEC 61000-6-2, IEC 61000-6-3	
1) Can be adjusted to 50 Hz.	3) Non-linear load, crest factor 3:1.	
Protection key: a) output short circuit	4) Up to 75 °F / 25 °C ambient temperature. 5) Switches off when no external AC source is available	
b) overload	6) Programmable relay that can for example be set for general	
c) battery voltage too high	alarm or DC under voltage or genset start/stop function.	
d) battery voltage too low e) temperature too high	- AC rating: 120 VAC / 4 A - DC rating: 4 A up to 35dc, 1 A up to 60 VDC	
f) 120 VAC on inverter output	7) Use, for example, to communicate with a lithium battery BMS.	
g) input voltage ripple too high		·



Sorger service 188 member 188 member 1980 member 1980

A convenient and low-cost solution for monitoring and control. With an on/off charger-only switch, full LED readout and a rotary knob to set PowerControl and PowerAssist levels.

Digital Multi Control Panel



VE.Bus Smart Dongle For monitoring and control via Bluetooth together with the VictronConnect app. It also measures battery voltage and temperature.



Interface MK3-USB Needed to configure the MultiPlus, Can be used with the VictronConnect app or VE.Configure software. The interface connects to the MultiPlus via an RJ45 UTP cable and plugs into a USB port.



VictronConnect app Use to monitor or configure the MultiPlus using your phone tablet or PC.



Current sensor 100A:50mA
To implement PowerControl
and PowerAssist and to
optimize self-consumption
with external current sensing.
Maximum current: 100A

